



# ANGLE SENSOR:

## Over view

angle sensor is used to measure angle of the boom this instrument makes it possible to prevent snags, enables hoist to lift the load straight up

## Features

- Housing protection of IP67
- Housing protects inside components from water, heat and humidity
- Accurate angle measurement on monitor

## Operating time

100% (continuous duty)

## Types

- Range: (0° - 90°) (0° - 180°) (0° - 360°)
- Current type: mV/V 4-20mA
- Voltage type: 0-5V

## Mounting options

- Crane boom angle
- Crane swing degree

